

HS-MS100+ Z-Wave Installation

Installing and Z-Wave configuration for the HS-MS100+.

Z-Wave Network Installation

Remove the back cover by rotating counter-clockwise and install 1 CR123A battery (included) inside the unit. Alternately, you may power the unit with a micro USB connection. The HS-MS100+ may be included into your Z-Wave network as a "secure" device or as a "non-secure" device. Use the instructions below to include or exclude HS-MS100+ to/from your Z-Wave network.

Secure Inclusion (Recommended if your home controller supports "S0" or "S2" Z-Wave encryption)

1. Put your home controller into Z-Wave 'inclusion' mode.
2. Press and hold the Z-Wave network button for 5 seconds, then release it. Wait for the inclusion process to finish.

Non-Secure Inclusion

1. Put your home controller into Z-Wave 'inclusion' mode.
2. Quickly press and release the Z-Wave network button once. Wait for the inclusion process to finish.

Exclusion

1. Put your home automation controller into Z-Wave 'exclusion' mode.
2. Quickly triple-press the Z-Wave network button. Wait for the exclusion process to finish.

Manual Reset (*Use this procedure to reset the HS-MS100+ to factory settings when the Z-Wave controller is missing or inoperable*)

Press and hold the Z-Wave button for 20 seconds. Release the button once the LED stops blinking and glows solidly.