

Settings

Information regarding Settings for the Z-Wave UI plugin.

Overview

The settings page of the Z-Wave UI allows you to modify the menu options to show your options and layouts that may be more familiar for some users.

Options


Below are basic options available to the Z-Wave UI plugin. Be sure to click Save after making any changes

Target Z-Wave Interface

This option shows the current Z-Wave interface being targeted by the Z-Wave UI plugin and it's status of whether it is enabled or disabled.

Show Legacy Z-Wave Menu

Enabling this option will add the old Z-Wave menu options to the new Z-Wave menu giving you both options to use.

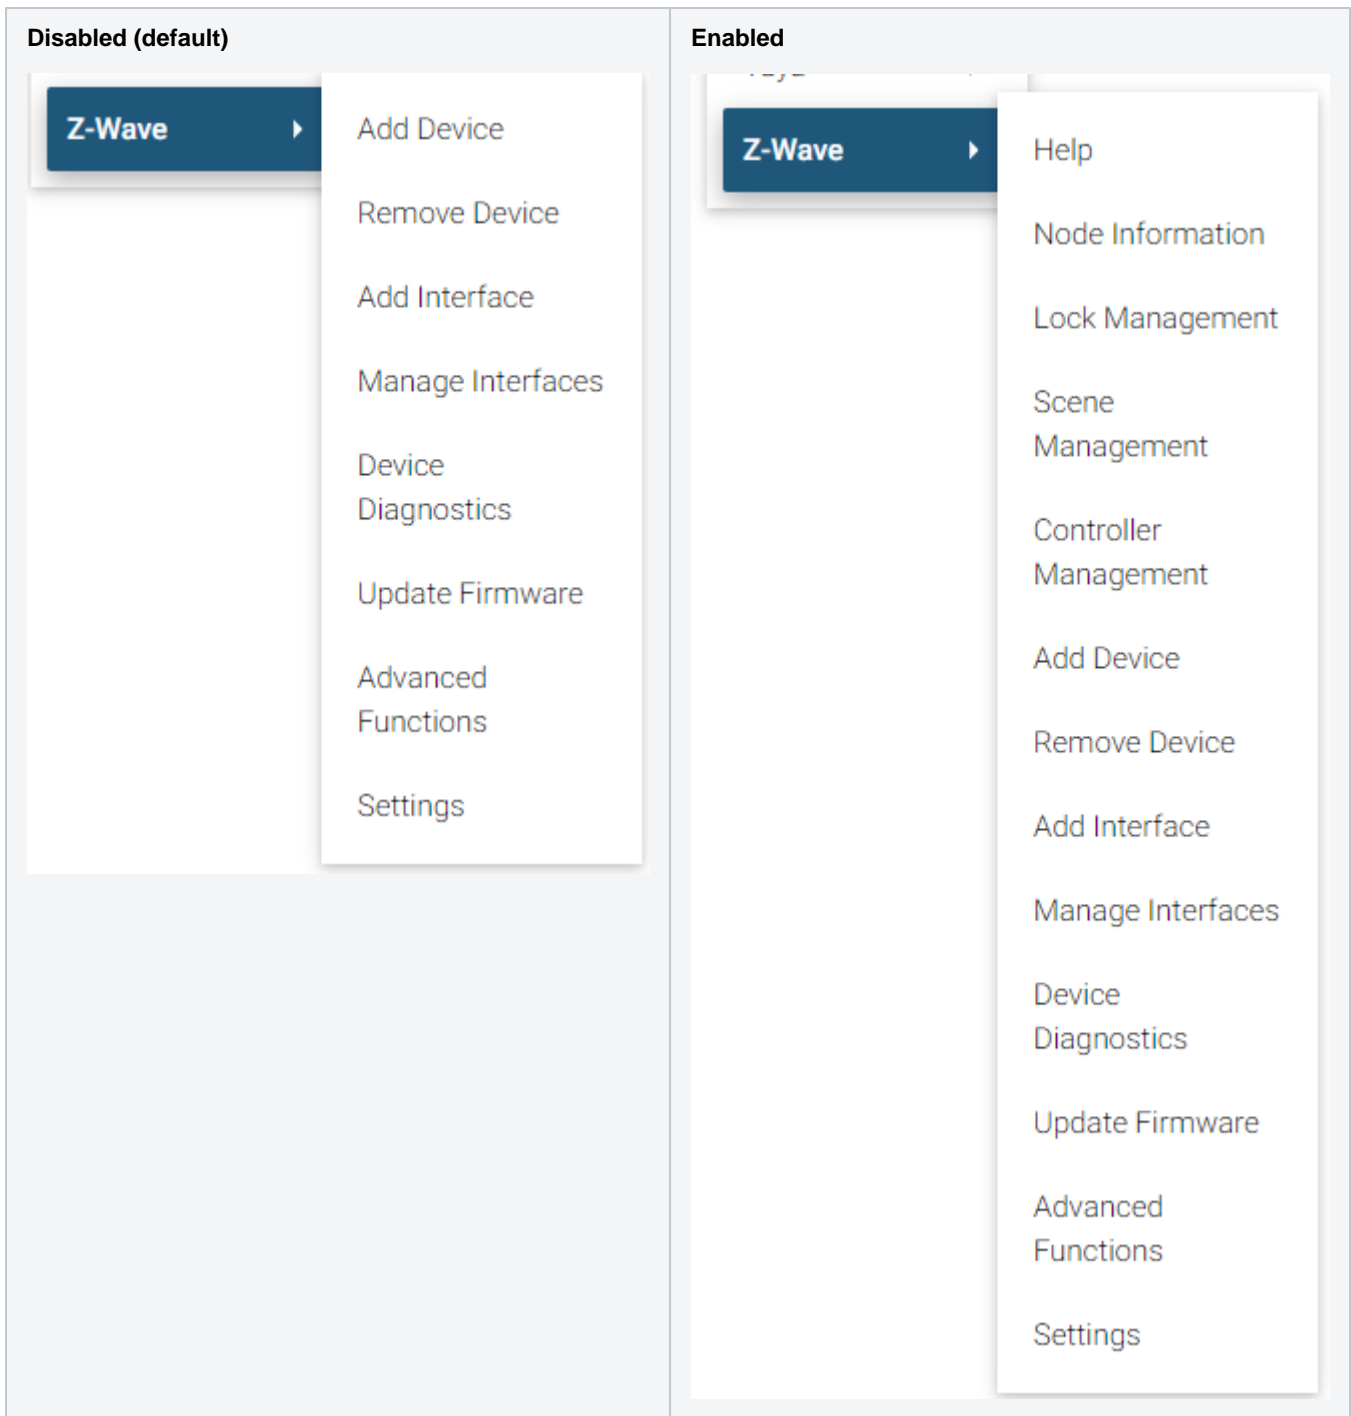

Show Legacy Z-Wave Device Config Page

Enabling this option will force the Z-Wave Device Config page to use the HS3 layout for Z-Wave device configuration pages. When disabled the option will use the HS4 layout and design standards. You will need to enable this setting to have access to Polling.

Disabled (Default)

Settings Features Status/Graphics **Z-Wave UI**

Device Specific Configuration Parameters

Bottom LED Operation

On if Load is On ▼

Paddle Operation

Normal ▼

Ramp Rate for Local Control (0-90) (1=1 second)

3

Ramp Rate for Remote Control (0-90) (1=1 second)

3

Low Dimming Threshold (firmware 5.14 or later)

Enabled

Settings Features Status/Graphics **Z-Wave** Z-Wave UI

Downstairs Living Room Light

MANAGE

Clicking Manage will bring you to the HS3 layout of device config (deviceutility)

Back

Z-Wave

▼ **Information About Node 4**

Options


Node Number: 4 ▼

Polling Interval: 0 Hours 0 Minutes 0 Seconds

Functions

▼ **Firmware Update**

▼ **Settings**

▼ **Associations** 

Done